

DOSKO®

Please reorder as needed.

These safety sheets are free of charge. Additional safety sheets are available online for your convenience at www.dosko.com. They are also available by contacting Dosko at 866-298-3659 and requesting item # **E786119**.


NOTE:

Please make sure that your customers sign the back of this safety sheet indicating they have read and understand the operating and safety instructions.

OPERATING INSTRUCTIONS

DOSKO®

Model 510-6-38KE

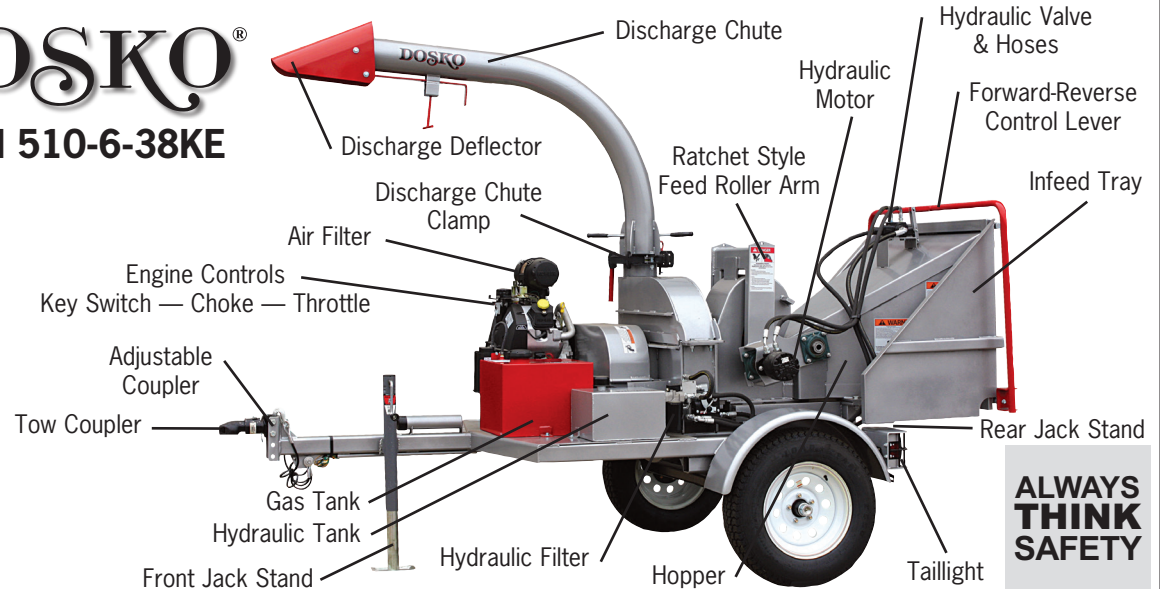

**ALWAYS
THINK
SAFETY**

Know Your Dosko: BEFORE STARTING OR USING THIS MACHINE, READ AND REVIEW THIS SAFETY SHEET! BE AWARE OF ALL POTENTIAL DANGERS. PROTECT WINDOWS AND VEHICLES FROM POSSIBLE FLYING DEBRIS AND BE AWARE OF ALL NECESSARY SAFETY PRECAUTIONS!

SETTING UP BRUSH CHIPPER

- Check oil in engine.
- Check that all bolts are tight.
- Check that all guards are in place.
- Make sure flywheel and chipper chamber are free of debris and can turn freely.

STARTING CHIPPER

Engine controls are located on the engine.

- Pull choke.
- Pull throttle to ¼ open.
- Turn start key switch to start engine.
- Push choke in and slowly increase engine throttle to full RPM.
- If equipped, automatic clutch will engage to 1300 RPM.
NOTE: It is very important to operate the chipper at full engine speed at all times. Operating at reduced speed can cause clogging, belt and, if equipped, clutch damage.

SHUTTING OFF CHIPPER

- Slowly bring engine speed down to idle.
- If equipped, clutch will automatically disengage at 1,300 RPM.
- Turn key to shut off engine.

▲ CAUTION: THE FLYWHEEL WILL CONTINUE TO TURN FOR 2 OR 3 MINUTES AFTER ENGINE IS SHUT OFF.

CHIPPING OPERATION

1. Start engine and bring engine to full operating speed.
2. Drop infeed tray down and feed limbs into chipper while standing to the side of the chipper. Never stand directly in front of infeed tray. The roller will pull limb in automatically. Do not attempt to put your hands into hopper/infeed tray to assist or clear feed roller.
3. This chipper is designed with a hydraulic feed roller system. The feed roller is controlled by a red control lever located at the top of the hopper. The lever when located in the middle position will stop the feed roller. When the lever is pushed (forward) toward chipper the roller will reverse. When the lever is pulled (outward) away from the chipper the roller will infeed.
4. Feed limbs or brush in feed hopper; the feed roller will pull material into chipper.
NOTE: DO NOT feed chipper standing directly in front of infeed tray. ONLY feed chipper standing to the left or right side of infeed tray.
5. Before shutting down the machine, the operator must “evacuate” the system. That is, to allow the chipper to discharge all debris/chips before shutting off engine.

Item # **E786119**

Thank You For Choosing DOSKO®

While your Dosko brush chipper is very easy to use, and is safety-engineered, there are some simple rules and procedures which **MUST** be followed to ensure your safety, and to ensure the machine's best performance. Please take a few moments to review these rules and procedures:

⚠ CAUTION

READ all instructions and decals before starting!

WEAR proper safety clothing including safety glasses, sturdy footwear, long sleeves, gloves, hearing protection, helmet, face shield, etc.!

OPERATE chipper only from left or right side NOT directly in front of infeed tray!

NEVER start chipper before checking controls or while standing in front of the chipper. Allow no one near chipper while in use!

ALWAYS be aware of your surroundings!

NEVER allow anyone within 100 feet while chipping!

NEVER leave brush chipper unattended while running! Always remove the key when chipper is not in use!

ALWAYS position machine to protect windows and vehicles from flying debris!

ALWAYS be prepared for emergencies by having first-aid supplies and a fire extinguisher!

NEVER operate while guards or shields are removed!

NEVER attempt to override any safety devices!

NEVER use in bad or questionable weather!

ALWAYS shut the machine off if any unusual noise or vibration occurs!

ALWAYS store machinery and gasoline away from the reach of any children!

ALWAYS drop the jack stand and secure the locking pin before unhooking unit from the tow vehicle!

ALWAYS drop the rear jack stand and secure the lock pin to the adjustable front jack to level and sturdy between front and rear jack stands!

NEVER manually attempt to transport unit to or from the job sight by lifting the tongue!

NEVER attempt to operate the unit unless both jack stands are in the DOWN position and securely pinned!

ALWAYS make sure both jack stands are raised and pinned in the up position and securely pinned when towing!

QUESTIONS? Call your authorized Dosko dealer or rental center, or call Dosko direct at 866-298-3659!

⚠ WARNING

TYPES OF MATERIAL - Dosko brush chippers are designed for wood only. Do not feed any other material into these chippers.

CLOGGING - When the chipper is over fed or the knives become dull, clogging may occur. If this chipper is a rental machine do not attempt to unclog chipper, take the chipper back to the rental yard and have one of their personnel unclog the chipper for you. The rental yard is familiar with all the safety procedures of this chipper.

CHIP DISCHARGE - Chips are discharged from the unit at a very high speed. Position the discharge chute at a proper and safe angle only when the engine is off. Severe injury can be caused by being struck by discharged materials.

WORK AREA - Make sure that the work areas are properly marked by using barricade signs, safety cones or caution tape. Keep all unauthorized people and pets at least 100 feet from chipper at all times. Please review the "safe working area" sticker located on the back side of the chipper near the discharge chute.

« DEALER INFORMATION »

**ALWAYS
THINK
SAFETY**

Item # E786119

DOSKO®

Use this form when renting or loaning the equipment model(s) indicated on the reverse side of this sheet. Have the user initial each of the three statements below and sign acknowledging receipt of this safety sheet.

Remove This Section and Keep For Your Records!

___ I have been instructed in the use of this brush chipper, and I fully understand its operations.

___ All controls have been checked and are in good working condition.

___ I have been instructed about the dangers of this machine if not used properly. I am aware of all safety procedures and I accept full responsibility. I agree to "hold harmless" the manufacturer, dealer, rental yard owner, or anyone connected with Dosko.

Dosko Brush Chipper Model:

510-6-38KE
Kohler

Serial Number _____

Name _____

Company _____

Address _____

City _____

State _____ Zip _____

Telephone (____) _____

Signature _____

Date _____

Dealer/Agent Name _____

Dir/Agt Signature _____

Date _____